


## How to adjust your Kason 1346



Remove Cover



Firmly grasp the elastomer cover between your fingers and thumb. Pull in a downward motion towards you.

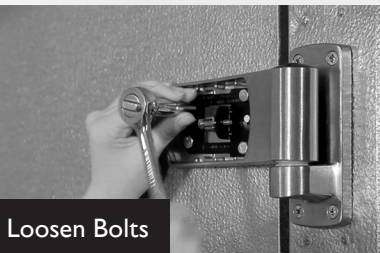

Loosen Bolts

Using a standard ratchet set, loosen the four corner bolts. **NOTE:** Do not remove these bolts, just loosen enough to allow the door to move to a square position.



Tighten | Loosen

Using a 3/8" open-end wrench, tighten or loosen the adjustable bolt until the door is square.



Re-tighten Bolts

Tighten the four corner bolts.



Replace Cover

Replace the elastomer cover, putting the bottom edge in first and tilting upwards until it is firmly in place.