



## To install a Spring Cartridge

---

Depress bushing and slip the spring loaded cartridge in place. Perform this simple operation in the field in minutes.

